



PEQ Upload process

1. Download PEQ required from Trinnov website to your computer


PEQ Upload Process



PEQ Upload process

1. Download PEQ required from Trinnov website to your computer
2. Insert a blank USB key into the motherboard of the Altitude


PEQ Upload Process

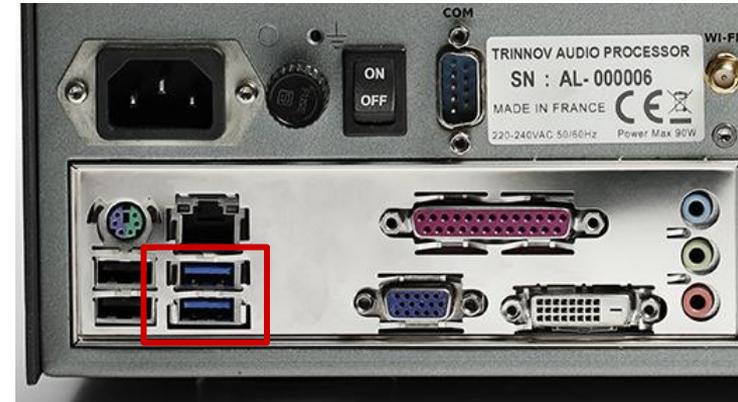

PEQ Upload process

1. Download PEQ required from Trinnov website to your computer
2. Insert a blank USB key into the motherboard of the Altitude
 - Popup window will appear on VNC Interface of Altitude
3. Save **ALL** the folders to USB key


PEQ Upload Process

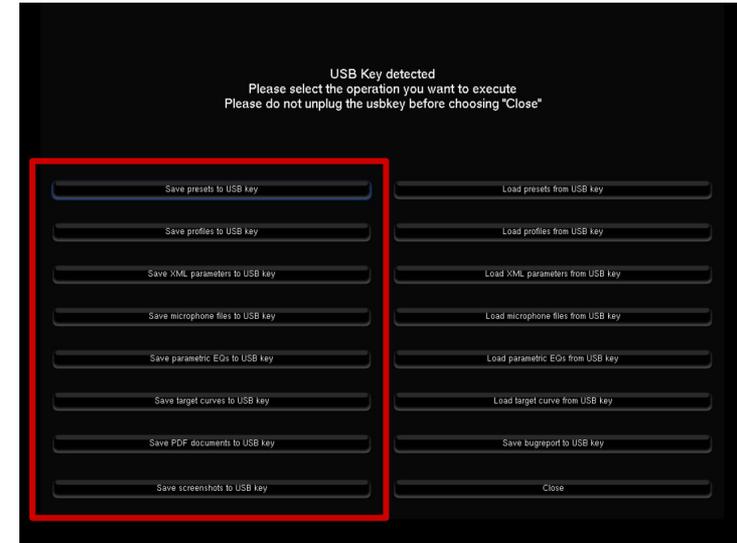

PEQ Upload process

1. Download PEQ required from Trinnov website to your computer
2. Insert a blank USB key into the motherboard of the Altitude
 - Popup window will appear on VNC Interface of Altitude
3. Save **ALL** the folders to USB key
4. Once saved press close and remove USB key from Altitude


PEQ Upload Process

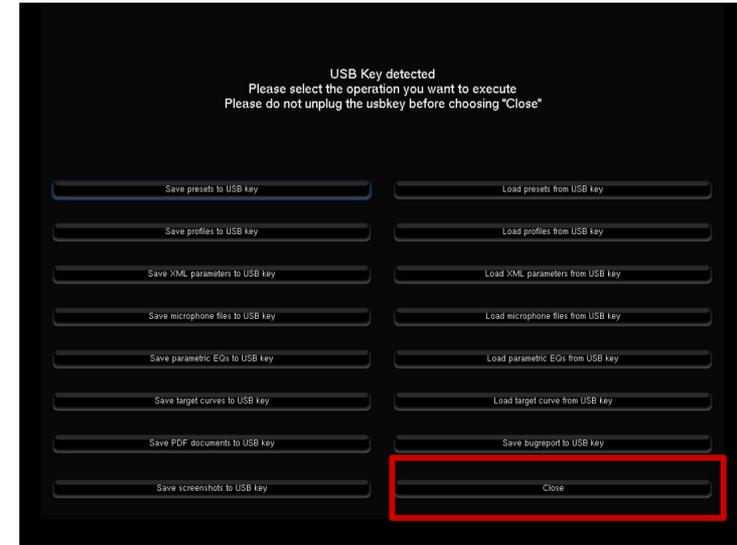

PEQ Upload process

1. Download PEQ required from Trinnov website to your computer
2. Insert a blank USB key into the motherboard of the Altitude
 - o Popup window will appear on VNC Interface of Altitude
3. Save **ALL** the folders to USB key
4. Once saved press close and remove USB key from Altitude
5. Plug USB key into your Computer, locate the Parametric_EQ folder and paste the PEQ files you downloaded into this folder


PEQ Upload Process

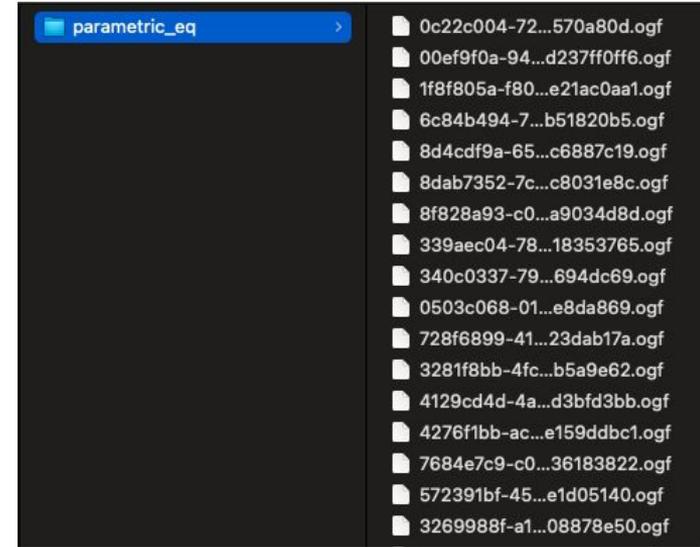

PEQ Upload process

1. Download PEQ required from Trinnov website to your computer
2. Insert a blank USB key into the motherboard of the Altitude
 - Popup window will appear on VNC Interface of Altitude
3. Save **ALL** the folders to USB key
4. Once saved press close and remove USB key from Altitude
5. Plug USB key into your Computer, locate the Parametric_EQ folder and paste the PEQ files you downloaded into this folder
6. Remove USB key from computer and plug into Altitude
 - When popup appears this time choose Load Parametric EQ from USB key.
 - Once loaded press close and **REMOVE** USB key from Altitude.


PEQ Upload Process

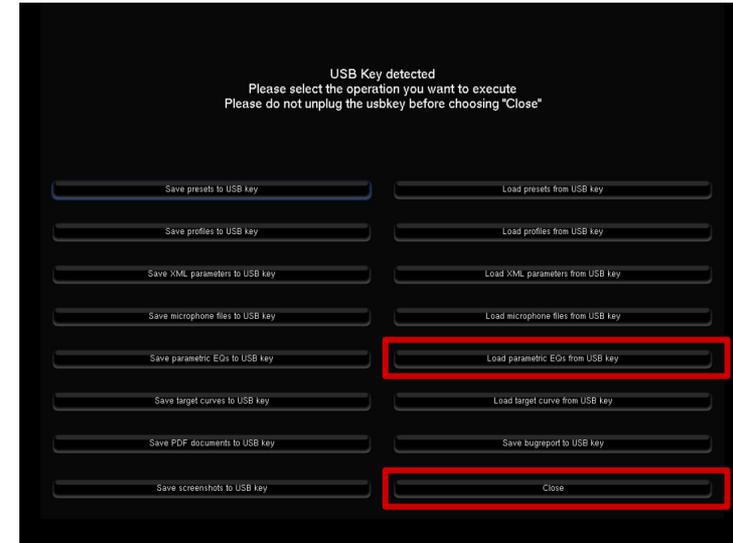

Adding PEQ to Speakers

1. On the Speaker Declaration page press PEQ button for the speaker you wish to add the PEQ


Adding PEQ instructions

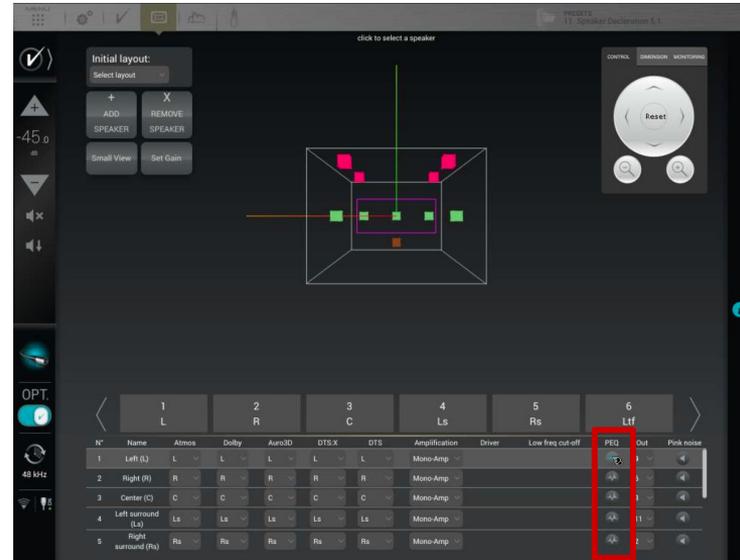

Adding PEQ to Speakers

1. On the Speaker Declaration page press PEQ button for the speaker you wish to add the PEQ
2. Popup window will appear and choose the speaker model from the list


Adding PEQ instructions

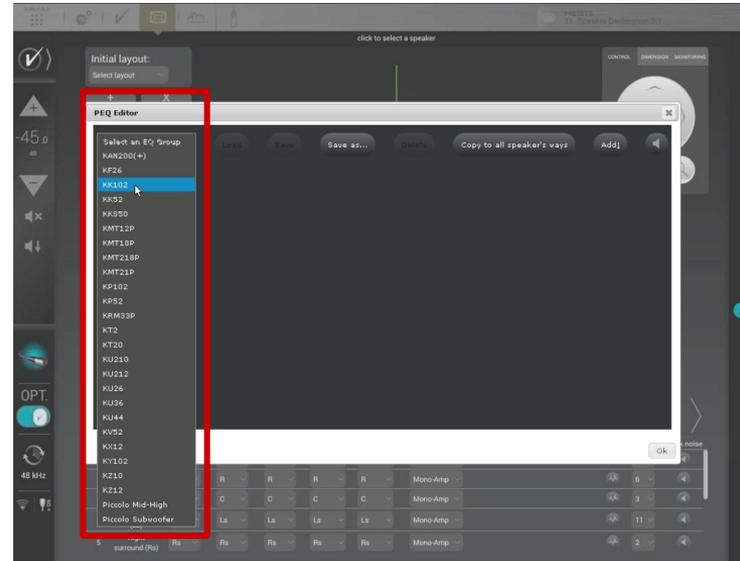

Adding PEQ to Speakers

1. On the Speaker Declaration page press PEQ button for the speaker you wish to add the PEQ
2. Popup window will appear and choose the speaker model from the list
3. Once selected list will disappear. Press Load
4. PEQ will appear in window
 - If using multiway speakers (and separate PEQ are not provided for each speaker way) press Copy to all speaker ways
5. Press OK to confirm


Adding PEQ instructions

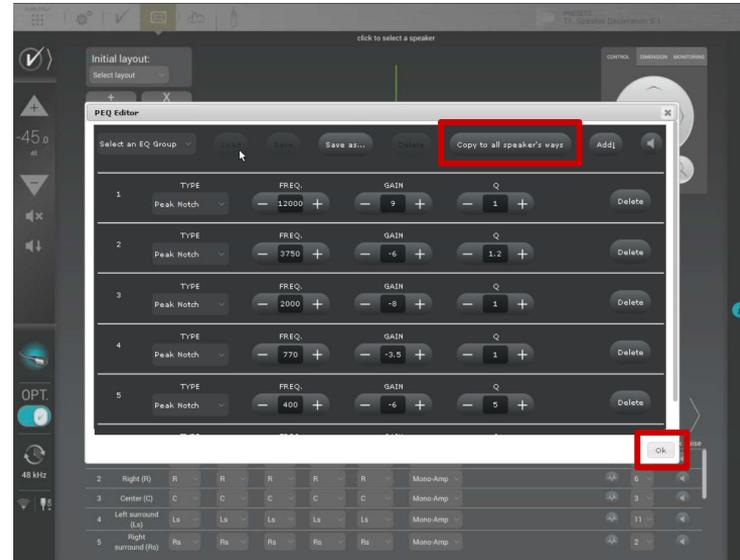

Adding PEQ to Speakers

1. On the Speaker Declaration page press PEQ button for the speaker you wish to add the PEQ
2. Popup window will appear and choose the speaker model from the list
3. Once selected list will disappear. Press Load
4. PEQ will appear in window
 - o If using multiway speakers (and separate PEQ are not provided for each speaker way) press Copy to all speaker ways
5. Press OK to confirm
6. PEQ icon now highlighted blue

Adding PEQ instructions

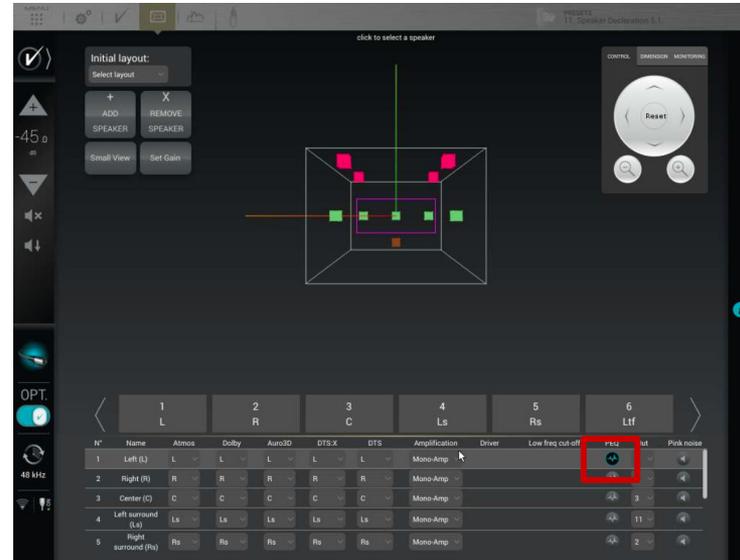

Adding PEQ to Speakers

1. On the Speaker Declaration page press PEQ button for the speaker you wish to add the PEQ
2. Popup window will appear and choose the speaker model from the list
3. Once selected list will disappear. Press Load
4. PEQ will appear in window
 - o If using multiway speakers (and separate PEQ are not provided for each speaker way) press Copy to all speaker ways
5. Press OK to confirm
6. PEQ icon now highlighted blue.
7. Repeat for remaining speakers as required

Adding PEQ instructions

